



No. 481551

Premium
ARCHITECTURAL HARDWARE


FITTING INSTRUCTIONS

WINDOW STAY


www.jkfitting.com

Locate The Point On The Window And Fix The Window Stay With Screws (20 X 5 CSK Head) As Shown In **Figure 1.**

Step 1

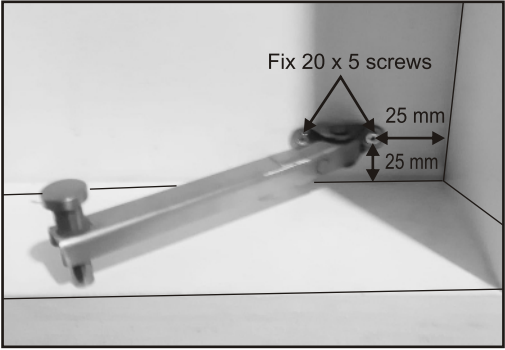


1ST ADJUSTMENT

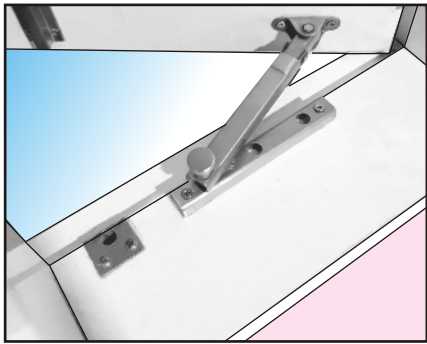


Locate The 8 mm pin Of Window Stay In The First Hole Of Adjustment Plate On The Window Frame As Shown In **Figure 2.**

Step 2

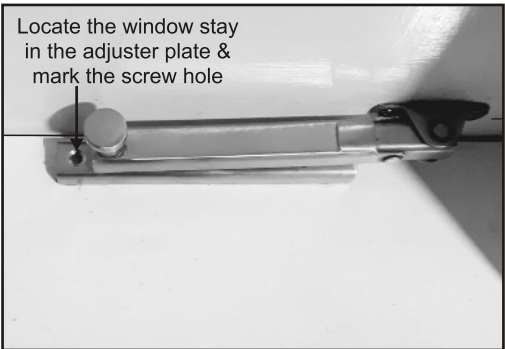


2ND ADJUSTMENT

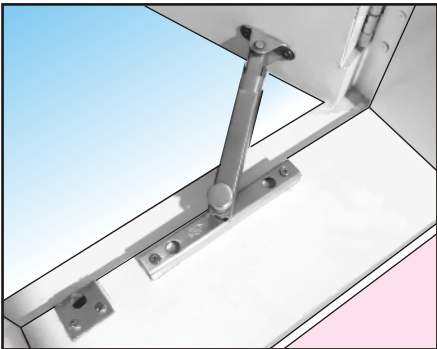


Mark And Screw (25 X 6 CSK Head) The First Hole Of The Adjustment Plate On The Window Frame As Shown In **Figure 3.**

Step 3

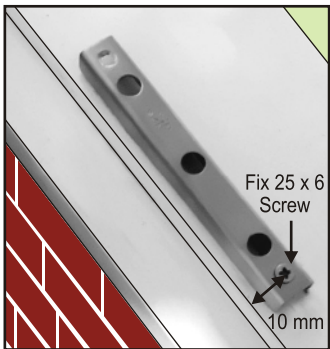


3RD ADJUSTMENT

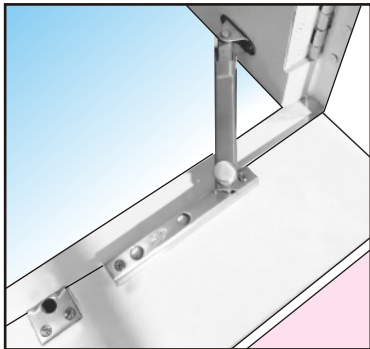

Align The Adjustment Plate Parallel With Window Frame And Fix Screw (25 X 6 CSK Head) In The Second Hole Of The Adjustment Plate As Shown In **Figure 4.**

Step 4

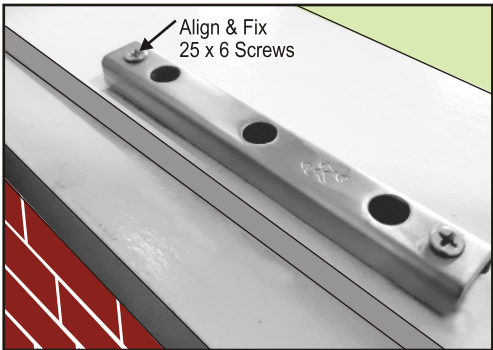

CLOSED POSITION

